



APPLICATION MANUAL


PRECAUTIONS:

- Make sure the vehicle has been decontaminated before pressure washing. Hand washes can precede decontamination.
- Check the humidity and the temperature of both the surface & surrounding area. (60°F +).
- Do not use wash products in direct sunlight, on a hot surface or under a heat lamp.
- Test products in an inconspicuous area before wash.
- Wear appropriate safety equipment.
- Keep away from children.




STEP #1

Shake
HYDRO FOAM
Before Use.

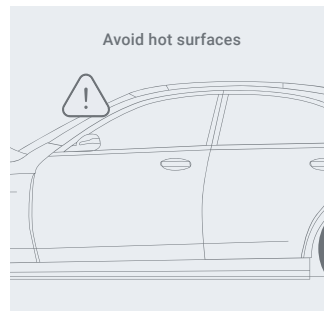


STEP #2

Make sure the vehicle is pre-washed and in a cool environment. Do not wash in direct sunlight.

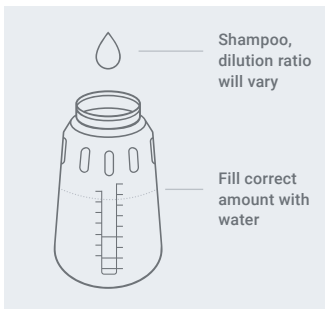


STEP #3

Dilute 1:10-1:15 into your foam canon of choice. Shake thoroughly to mix.

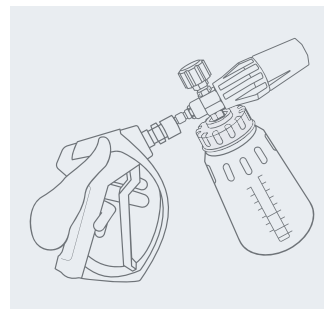


STEP #4

Spray the surface evenly. Spray until achieving full surface coverage. Let dwell for 30-60 seconds.

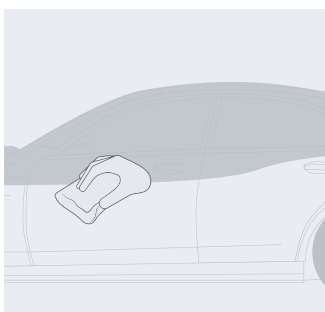

STEP #5

Gently agitate the product with a **WASHMITT** or **WASHPAD**.

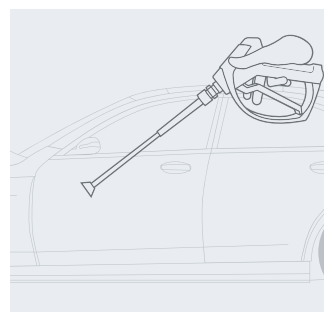

STEP #6

Rinse off with water & towel dry.