




# APPLICATION MANUAL

## PRECAUTIONS:

- Make sure the vehicle has been washed & decontaminated.
- For best results, wait 24 hours in between layers.
- Check the humidity and the temperature of both the surface & surrounding area (60°F +).
- Do not apply wax in direct sunlight, on a hot surface or under a heat lamp.
- Test wax on an inconspicuous area before applying.
- Waxes are safe for skin contact, and can be applied by bare hand.
- Keep away from children.
- We recommend having different light sources to ensure proper installation.

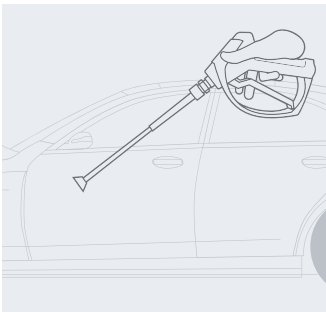

### STEP #1

Wash the vehicle thoroughly. Let dry before application.




### STEP #2

Add wax to the applicator.



### STEP #3

Apply a thin layer of wax onto the surface of the vehicle.

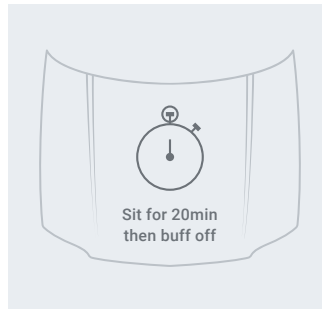

### STEP #4

Let dry for 20 min and buff off. (Let dry longer in humid and high - temperature climates).

Multiple layers can be added after 24 hours.