



# APPLICATION MANUAL

## PRECAUTIONS:

- Make sure the surface has been primed with Nappa Cleaner.
- For best results, wait 10 to 15 minutes after flash time in between layers.
- Check the humidity and the temperature of both the surface & surrounding area. (60°F +).
- Do not apply the coating in direct sunlight, on a hot surface or under a heat lamp.
- Test product on an inconspicuous area before applying.
- Work in a ventilated area, and use gloves.
- Keep away from children.
- Discard towel & applicator immediately after use.
- We recommend having various light sources while applying.

## STEP #1




Shake  
**NAPPA COAT**  
Before Use.




## STEP #2

Prime your surface with  
**NAPPA CLEANER**

## STEP #3

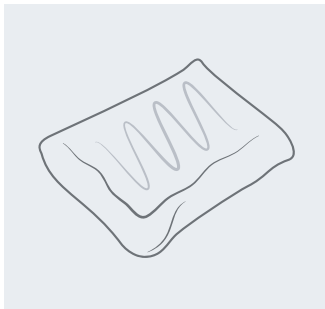

Spray a small amount of  
product onto a  
**BLACK FOX  
APPLICATOR**

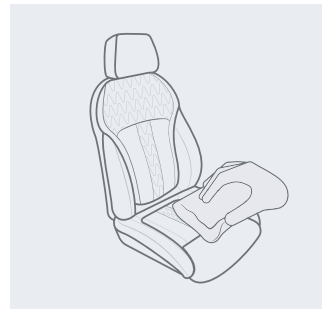

## STEP #4

Apply the product evenly.

## STEP #5



In case of overapplication, wipe  
excess away.



## STEP #6

Let the surface cure for 25 min.