



# APPLICATION MANUAL


## PRECAUTIONS:

- Check the humidity and the temperature of both the surface & surrounding area.
- Do not apply in direct sunlight, on a hot surface or under a heat lamp.
- Keep away from children.




### STEP #1

Ready a microfiber folded towel.

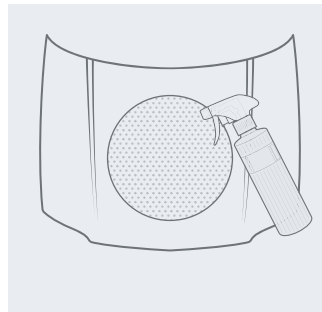

### STEP #2

Spray Reborn onto the surface, or onto the towel. Saturate spots that require more attention.

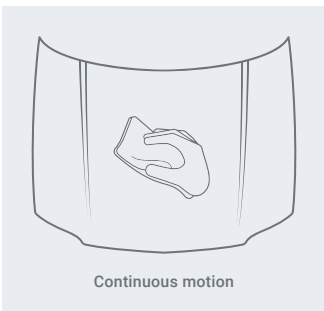

### STEP #3

Lay the towel flat against the surface. Wipe with smooth, even pressure in a contiguous sweeping motion.



### STEP #4

Repeat as necessary.

Reborn works great for removing fingerprints and minimal residue on electronics and other delicate surfaces.