



# APPLICATION MANUAL


## PRECAUTIONS:

- Make sure the vehicle has been decontaminated before pressure washing. Hand washes can precede decontamination.
- Check the humidity and the temperature of both the surface & surrounding area. (60°F +).
- Do not use wash products in direct sunlight, on a hot surface or under a heat lamp.
- Test products in an inconspicuous area before wash.
- Wear appropriate safety equipment.
- Keep away from children.




## STEP #1

Shake  
**SNOW FOAM**  
Before Use.

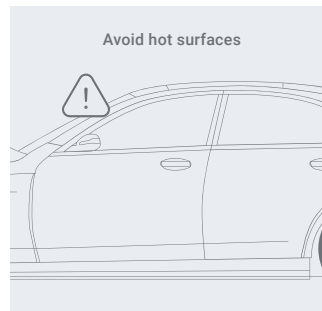


## STEP #2

Make sure the vehicle is in a cool environment. Do not wash in direct sunlight.

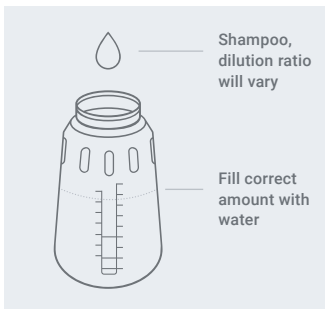


## STEP #3

Dilute 1:20 ~ 1:30 into a foam cannon of choice. Shake thoroughly to mix and spread across entire vehicle.

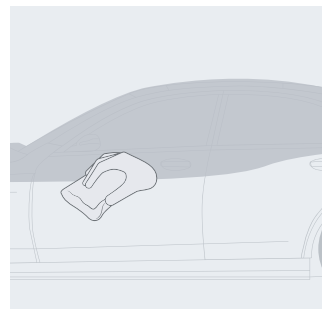


## STEP #4

Completely wash the vehicle using a **WASH MITT** or **WASH PAD**. Begin w/ the top of the vehicle and work downwards.

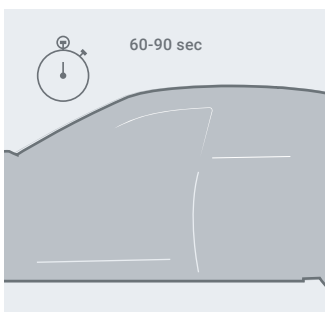

## STEP #5

Let dwell for 60-90 seconds. Do not let Snow Foam dry on the vehicle.

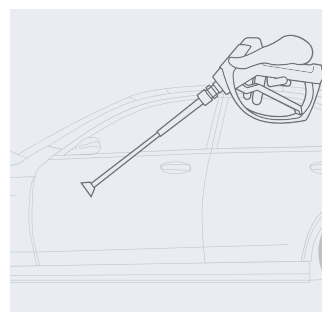

## STEP #6

Rinse off with water.